

DAKOTA SMART-NUT™


INSTALLATION INSTRUCTIONS




1.
Snap on
Rod



2.
Adjust
Up/Down

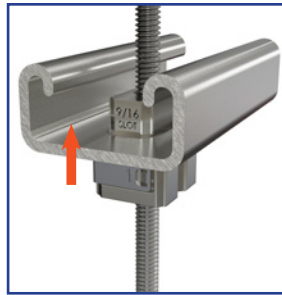

3.
Insert
Through Strut

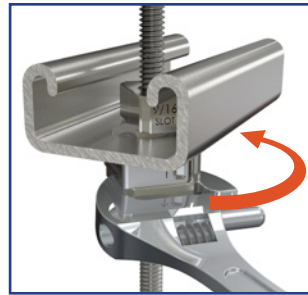

4.
1/4
Turn



Smart-Nut
Locked

DAKOTA SMART-NUT™

1. Snap on threaded rod
2. Adjust up and down as needed
3. Insert through 9/16" x 1-1/8" slots in strut
4. Use a wrench to make a 1/4 turn counter-clockwise to lock the Dakota Smart-Nut in place

DAKOTA SMART-NUT SIZING CLIP

1. Strut slots (9/16" x 1-1/8") may be slightly different per manufacturer.
2. If you feel the Dakota Smart-Nut is not tight enough when doing the install, attach a sizing clip to the interior lip of the strut slot
3. Re-install the Dakota Smart-Nut for a secure fit

